

- 1. After the download is complete, open the new disk image named "Lezyne-GPS-updater.dmg"
- 2. The disk image contains the updater application. Double-click the Lezyne icon in the window to launch the application.

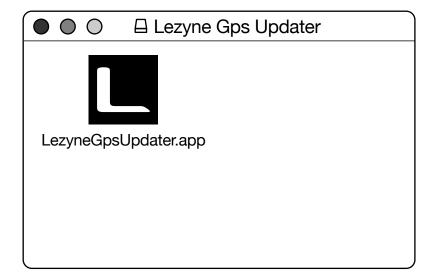

Ć

3a. The firmware version currently on your Lezyne GPS
Device will be displayed at the top of the updater.
The firmware version you are about to load onto the
device will be noted in the button at the bottom of the
window. Click the button at the bottom of the window
to update your device.

IMPORTANT: You must ensure your Lezyne GPS Device does not come unplugged once the update has begun.

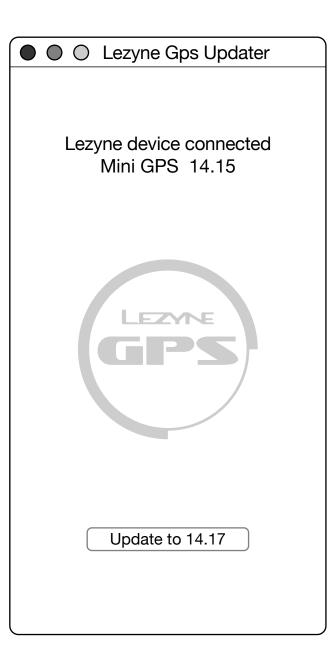

LezyneGpsUpdator

About Lezyne Gps Updater

Hide Lezyne Gps Updater **Hide Others**

Show All

Restore device to factory defaults Show log

Quit Lezyne Gps Updater

3b. If any problems persist with your device, it is possible to erase all of the files and reset the device to the default factory settings by going to the toolbar menu.



Lezyne device connected Mini GPS 14.17



Update to 14.17